




CHEN YING


B Type Adjustable Distributor

B Type Adjustable Distributor / CB Type Anti-Vibration Distributor With Nut

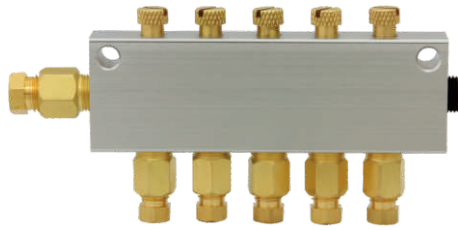

Model	Outlet Num.	Inlet Bore	Outlet Bore	A (mm)	B (mm)	Inlet Bore Ø4 N. W. (g)	Inlet Bore Ø6 N. W. (g)
B-2	2	Ø6(M10xP1.0) or Ø4(M8xP1.0)	Ø4(M8xP1.0) or Ø6(M10xP1.0)	47	37	96	99
B-3	3			62	52	127	130
B-4	4			77	67	159	162
B-5	5			92	82	189	192
B-6	6			107	97	221	224
B-7	7			122	112	251	254
B-8	8			137	127	283	286
B-9	9			152	142	313	316
B-10	10			167	157	343	346
B-11	11			182	172	374	377
B-12	12			197	187	404	407

※Standard type: inlet bore is Ø6 and outlet bore is Ø4.

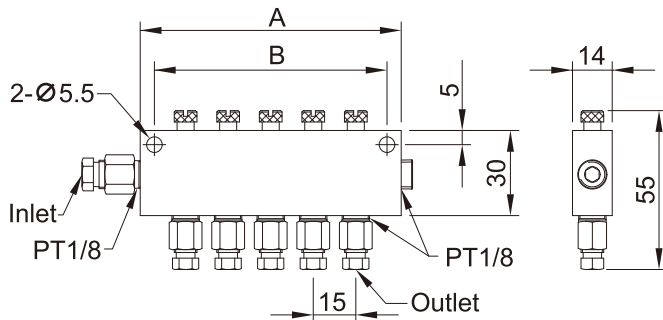

Standard B-5 Type Distributor Diagram

◆ Order Code :


B-5	6	4
Outlet Number	Inlet Bore	Outlet Bore
2 : 2 Outlets	4 : Ø4	4 : Ø4
to	6 : Ø6	6 : Ø6
12 : 12 Outlets		

CB Type Anti-Vibration Distributor With Nut



Model	Outlet Num.	Inlet Bore	Outlet Bore	A (mm)	B (mm)	Inlet Bore Ø4 N. W. (g)	Inlet Bore Ø6 N. W. (g)
CB-2	2	Ø6(M10xP1.0) or Ø4(M8xP1.0)	Ø4(M8xP1.0) or Ø6(M10xP1.0)	47	37	101	103
CB-3	3			62	52	134	136
CB-4	4			77	67	166	168
CB-5	5			92	82	198	200
CB-6	6			107	97	230	232
CB-7	7			122	112	263	265
CB-8	8			137	127	295	297
CB-9	9			152	142	315	317
CB-10	10			167	157	362	364
CB-11	11			182	172	375	377
CB-12	12			197	187	410	412

※Standard type: inlet bore is Ø6 and outlet bore is Ø4.

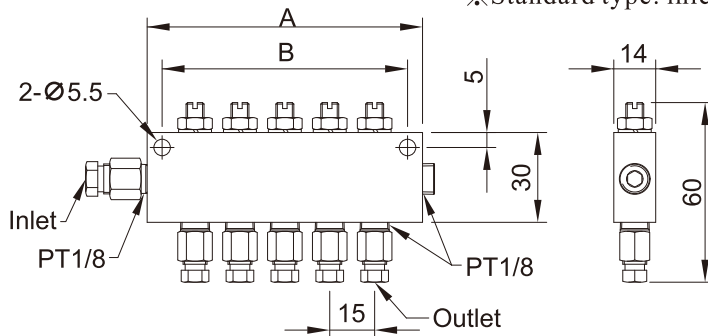

Standard CB-5 Type Distributor Diagram

◆ Order Code :

CB-5	6	4
Outlet Number	Inlet Bore	Outlet Bore
2 : 2 Outlets	4 : Ø4	4 : Ø4
to	6 : Ø6	6 : Ø6
12 : 12 Outlets		